

# REMOTE REFERENCE FIND OUT WHAT THE BUTTONS ON YOUR REMOTE DO.

## EQUIPMENT CONTROLS

**MODE SWITCH**  
Changes remote mode to control other equipment. Left position controls the DIRECTV® Receiver. (Other equipment must be programmed individually.)

**TV INPUT**  
Press to see signals cycle through to your TV from the DVD player or other equipment.

**FORMAT**  
Cycles through HD resolutions and screen format options. (This button only works if you have HD Access.)



**POWER**  
Turns on/off whichever equipment the MODE switch is set to. (Turning off receiver before TV may display a gray or black screen.)

**TV POWER ON/OFF**  
Turns both your DIRECTV® Receiver and TV on/off at the same time. (Remote must be programmed for your TV to use this function. DVR Receiver still records when off.)

## DVR CONTROLS

**STOP**  
While viewing recorded programs, stops playback.

**REPLAY**  
Jumps back six seconds. Hold down to jump back to the beginning.

**REWIND**  
Press up to four times to rewind at increasing speeds. Hold down to jump back to previous tick mark.

**PAUSE**  
Pauses current program.

**DASH**  
Press twice to delete recorded shows from your list.



**ADVANCE**  
Jumps ahead 30 seconds. Hold down to jump forward to the end.

**PLAY**  
Play current program. Hold down for slow motion.

**FAST-FORWARD**  
Press up to four times to fast-forward at increasing speeds. Hold down to jump to next tick mark.

**RECORD**  
Press once to record program or the program highlighted in the On-Screen Guide. Press twice to automatically record a series.

## NAVIGATION CONTROLS

**ACTIVE**  
Displays the DIRECTV Active™ channel—local weather and more.

**GUIDE**  
Press once to see the On-Screen Guide. Press twice to see programming grouped into categories.

**SELECT**  
Selects the highlighted item.

**BACK**  
Takes you to the previous menu screen.

**MENU**  
Brings up the Quick Menu.



**LIST**  
Displays your recorded programs.

**EXIT**  
Exits the menu and returns to last channel viewed.

**ARROWS**  
Moves around (up, down, left, right) within a menu.

**INFORMATION**  
Displays information about the program you are watching or what is highlighted in the On-Screen Guide.

**CHANNEL/PAGE**  
Changes TV channels. Scroll a full page while viewing the Guide.

**PREVIOUS**  
Returns or switches to last channel viewed.

## INTERACTIVE CONTROLS

**RED**  
While viewing the Guide, jumps 12 hours back.

**GREEN**  
While viewing the Guide, jumps 12 hours forward.

**BLUE**  
While viewing full-screen TV, displays the Mini Guide.

**YELLOW**  
While viewing the Guide, displays various Guide Options.



Other functions vary. Look for on-screen hints.

